

rooflights.com WHERE DO I MEASURE TO?

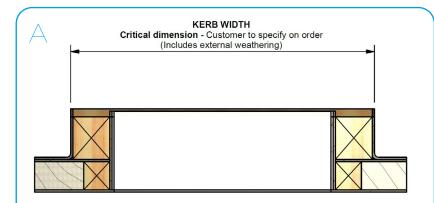

rooflight measurement

Our stock rooflights take the critical dimension measurement of the external weathered kerb - see image A.


Please refer to the specific product drawings for details on kerb dimensions.

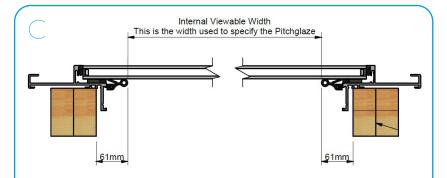

Pitchglaze measurement

Our Pitchglaze roof windows take the critical dimension measurement of the Internal Viewable Width - see image C.


It is important that you allow 61mm on all four sides between the internal viewable width and the supporting structure to allow for internal finishes.

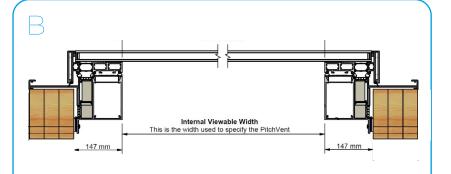

Pitchvent measurement

Our Pitchvent roof windows take the critical dimension measurement of the Internal Viewable Width - see image B.

It is important that you allow 147mm on all four sides between the internal viewable width and the supporting structure to allow for internal finishes.

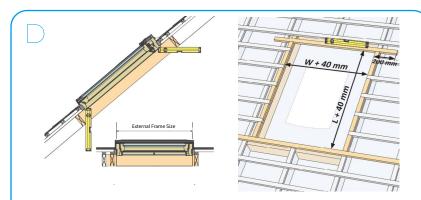

Keylite measurement

Our Keylite roof windows take the critical dimension measurement of the external frame size of the roof window - see image D.

When preparing the aperture, you will need to add 40mm on to each side of your roof window frame size.